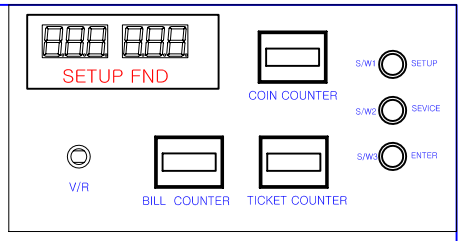

CONTROL PANEL

5.3 Function for GSETUP Mode.

5.3.1 At GSETUP mode, press SW1 again to enter into each function.
5.3.2 Press SW2/SW3 to move to each function.
5.3.3 After selecting each funtion, press SW1 in order to set function value.
5.3.4 Change Function Value with SW2/SW3.
5.3.5 Press SW1 again return to Function after changing Function Value.

- Mode display

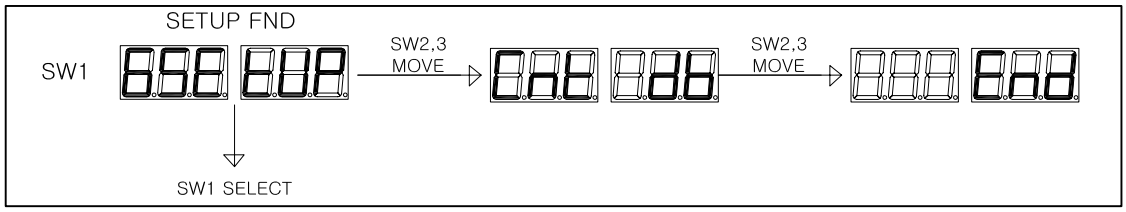

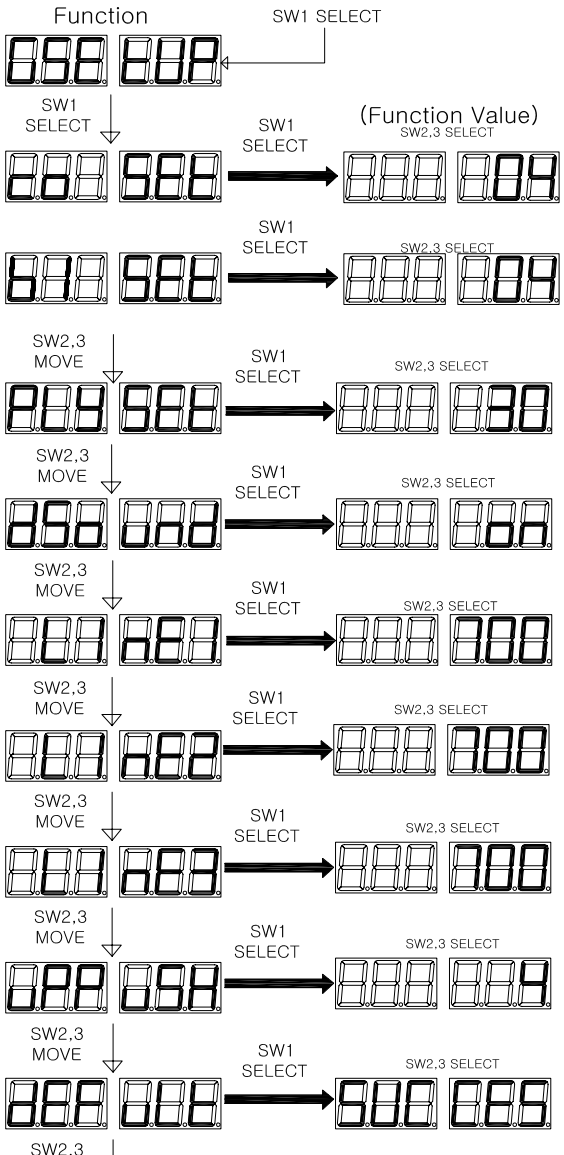

Set the no. of coin/s per credit ON Coin mech
Range:0~9 / Default:1coin/credit
Unit : 1 coin
0:Free play mode — 04 coin

Set the no. of coin/s per credit ON bill valedator. (DBA)
Range:0~9 / Default:1coin/credit
Unit : 1 coin
0:Free play mode — 04 coin

Set the play time per credit
Range:1~99 / Default:30secs/credit
Unit : 1 secs — 30 sec

Attraction sound
on / off — ON

Payout rate for Lower Line
Range:1~9999 / Default:1prize/700credit
Unit : 1 credits — 700

Payout rate for Middle Line
Range:1~9999 / Default:1prize/700credit
Unit : 1 credits — 700

Payout rate for Upper Line
Range:1~9999 / Default:1prize/700credit
Unit : 1 credits — 700

Compulsory Upper Deviation
Range:1~9 / Default:4
Unit : 1 unit (1=0.4mm) — 4

Reset all GSETUP to return Default values. — SUCCES
(Keep on pushing sw1 for 5 seconds)

*Remarks : All function values return to Default values, when SW1 is pushed at "SUCCES".

Save all setting value.

*Remarks : All function values are saved, when SW1 is pushed at "END".

*Remarks : 1) Return to game mode by pushing SW1.
2) Move to CNTDB mode by pushing SW2/SW3.